

Assembly
Instructions

CBR-A0050A
CBR-A0060A

19" Rack Mount Kit

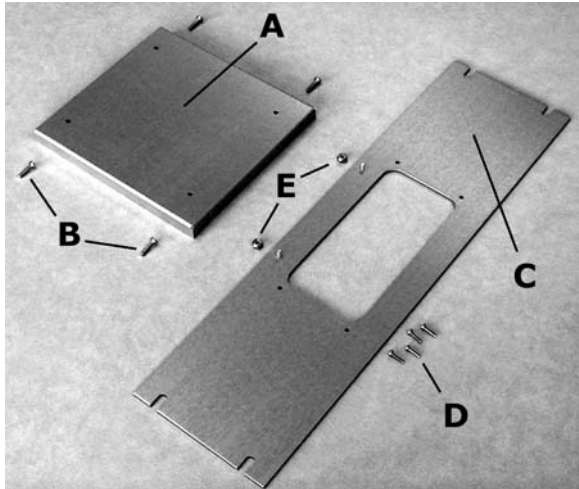


CBR-A0050A

	Single Unit Kit	Qty
A	Bottom Support	1
B	Bottom Screws	4
C	Front Plate (single)	1
D	Front Screws	4
E	Locking Nuts	2

CBR-0060A

	Dual Unit Kit	Qty
A	Bottom Support	2
B	Bottom Screws	8
C	Front Plate (dual)	1
D	Front Screws	8
E	Locking Nuts	4

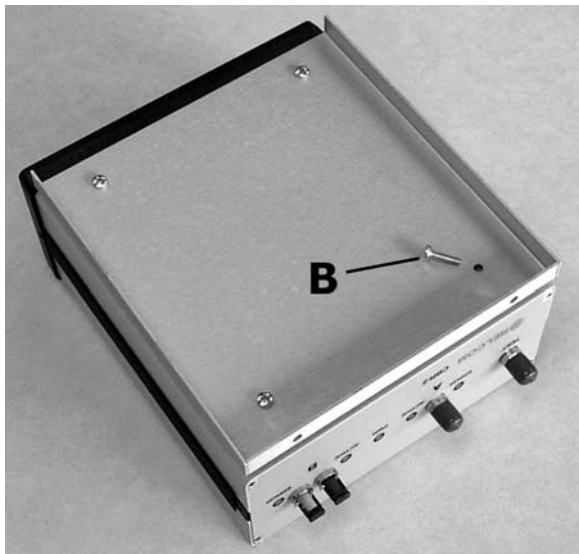


Remove the front Bezel of the Repeater by removing the two side retaining screws.

Remove the four screws that hold the Repeater's front panel and discard them.

Place the Repeater upside down on a flat surface and position the Bottom Support (A) so that the end with two drilled holes is in alignment with the front panel of the Repeater.

Secure the Repeater to Bottom Support (A) with the four Bottom Screws (B).

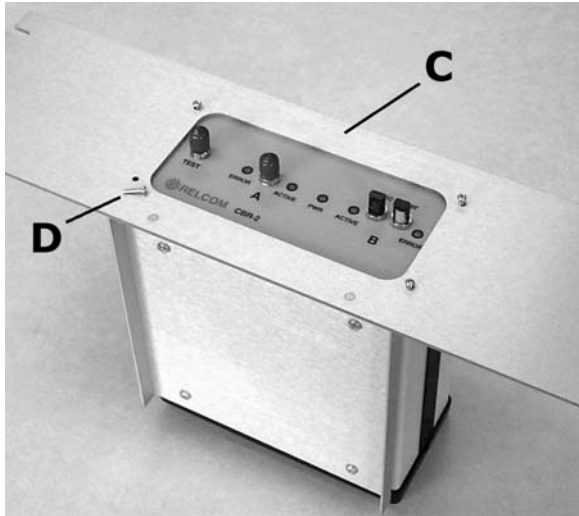

Stand Repeater on its rear end and place Front Plate (C) over the front panel of the Repeater so that the two bolts on the back of Front Plate (C) go through the two holes in Bottom Support (A).

Partially insert all four Front Screws (D) through Front Plate (C) then tighten.



Position Repeater assembly so that the underside of Bottom Support (A) is accessible.

Attach Locking Nuts (E) to bolts of Front Plate (C) and tighten.